

HD Elastomeric Coupling HD Standard, All Sizes

Installation & Maintenance Instructions


Form 1183

Parts List

1. Male Hub (1)
2. Retaining Ring (1)
3. Washer (1)
4. Roll (8)
5. Female Hub (1)

How to Install Coupling

1. Mount hubs on shafts as shown.
2. Place ring then washer over male hub.
3. Bring equipment together and align.
4. Insert rolls into pockets.
5. Position washers and retaining ring as shown.

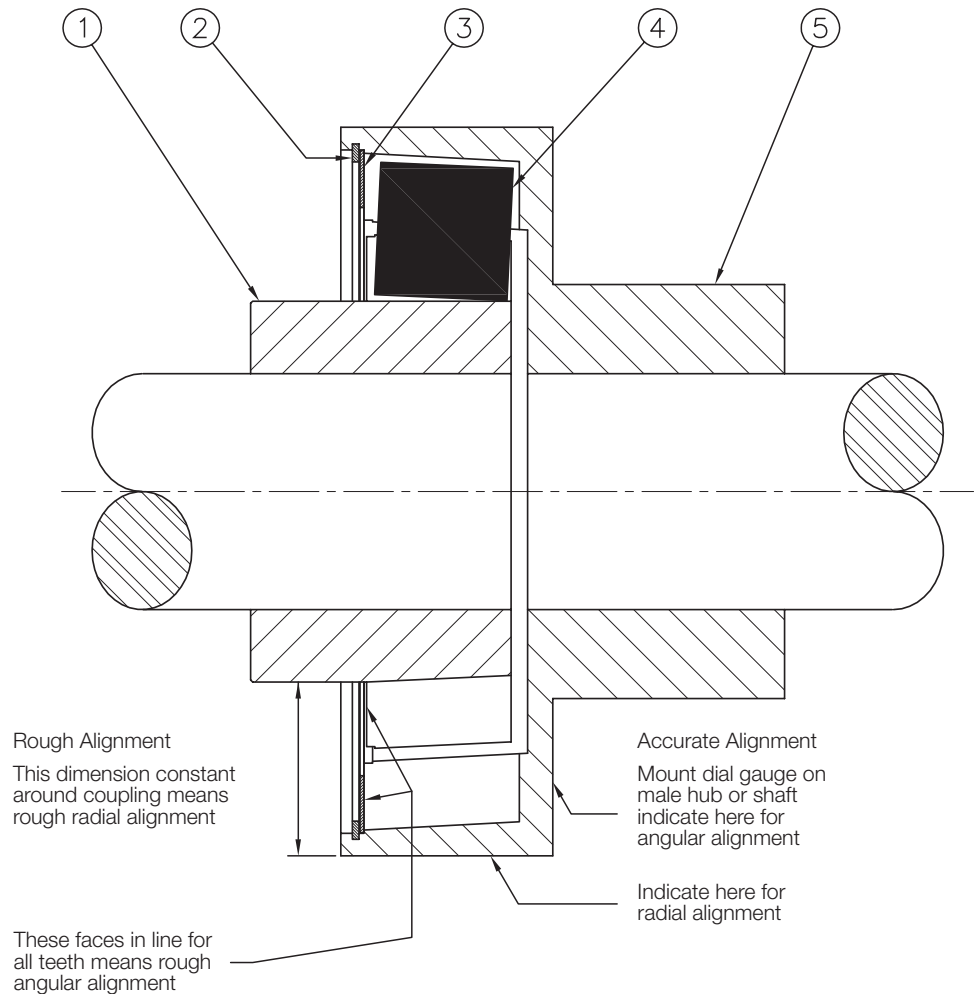

WARNING



ROTATING EQUIPMENT IS POTENTIALLY DANGEROUS AND MUST BE PROPERLY GUARDED. THE USER SHOULD COMPLY WITH APPLICABLE SAFETY CODES IN ACCORDANCE TO OSHA STANDARDS.



TB Wood's Disc Coupling Products
2000 Clovis Barker Road • San Marcos, TX 78666 - USA
888-449-9439 • Fax: 512-353-4017
www.tbwoods.com